

## FCC Statement

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio from the receiver
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

## Caring for Your Radio

To enjoy your radio for a long time:

- Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.
- Do not take it apart. If something is wrong with the radio, take it to your local RadioShack store for assistance.

## Listening Safely

To protect your hearing when using earphones, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Wearing earphones while driving a car or riding a bicycle can create a traffic hazard and is illegal in some areas.

### RadioShack Limited Warranty

This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIOSHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

*We Service What We Sell* 10/95

**RadioShack**

**A Division of Tandy Corporation  
Fort Worth, Texas 76102**

12A5

Printed in Taiwan

**OPTIMUS®**

# AM<sup>2</sup>FM STEREO MATE® Receiver

n Ultra-Lightweight  
n Supplied In-Ear Phones

**Owner's Manual**

Cat. No. 12-917

## INSTALLING BATTERIES

Your AM<sup>2</sup>FM STEREO MATE Receiver requires one AAA battery. We recommend an alkaline battery, such as RadioShack Cat. No. 23-555 (not supplied).

### Cautions:

- Match the polarity symbols (+ and –) marked on the back of the receiver.
- Always use a fresh battery of the required size and type.
- If the receiver's sound flutters or fades, replace the battery.

## USING THE RADIO

**AM/FM/FM ST** — switch to select the band (for weak FM stereo stations, set it to FM)

**TUNING** — rotate to select your favorite station

**VOLUME** — rotate to adjust the volume (see "Listening Safely")

**POWER ON/E-BASS/OFF** — switch to turn the radio on and off, or select **E-BASS** (Extended Bass Boost) to enhance the bass sound of FM stereo

**PHONES** — for connecting the supplied in-ear phones

© 1995 Tandy Corporation.  
All Rights Reserved.

Optimus and STEREO MATE are registered trademarks used by Tandy Corporation.  
RadioShack is a trademark used by Tandy Corporation.